


CUSTOM RECESSED SCREEN INSTALLATION INSTRUCTIONS FOR PULL CHAIN OPTION

(SIDE 1)

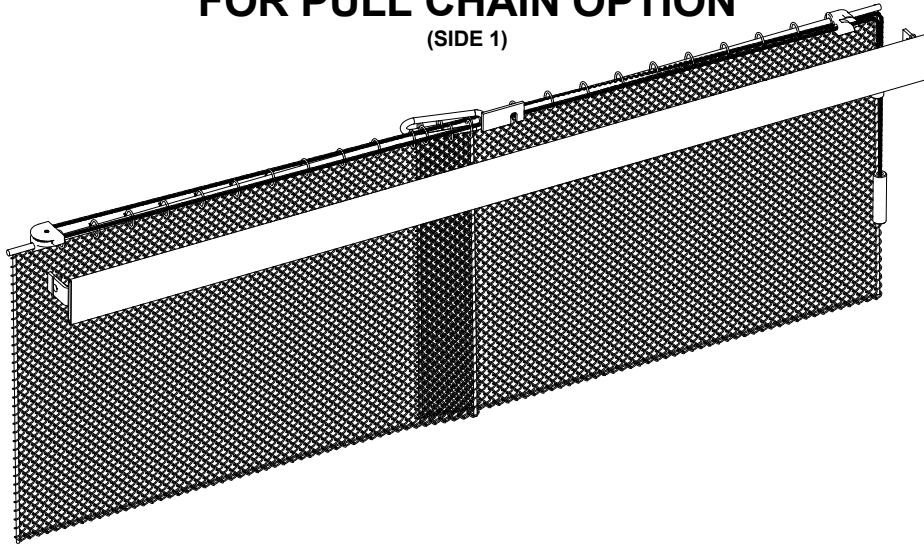

A. INSPECT THE ASSEMBLY

1. Carefully unpack the Fireplace Screen Assembly and lay it face down on a soft protective surface. *Note: Facing the back of the Screen, the Pull Chain Knobs will be on the left.*
2. Carefully examine the Pull Chain for any twists or kinks that may have occurred during shipping. If present, detangle or untwist the chain as required.

B. INSTALL MESH EDGE RODS

1. Follow the Instructions on **SIDE 2** to install the Mesh Edge Rods.

C. INSTALL THE SCREEN

1. Refer to the "ASSEMBLY AND INSTALLATION INSTRUCTIONS FOR CUSTOM RECESSED SCREENS"
"Step C. PLEATING CURTAINS" to install the mesh retaining clip and last mesh ring.
"Step D. LINTEL CLAMP INSTALLATION" to install the lintel clamp.
"Step F: LINTEL BRACKET INSTALLATION WITH THREAD CUTTING SCREWS" to install the lintel bracket.

D. INSPECT THE OPERATION OF THE SCREEN

1. Facing the Fireplace with the Screen properly installed the Pull Chain Knobs will be on the right.
2. Verify that the Pull Chain is properly seated in both the Left and Right Chain Guides and free of any twists or kinks.
3. Gently pull the Pull Chain Knob(s) to open or close the Firescreen several times. It should open and close with ease.



P.O. Box 3707
19505 S.W. 90th Ct.
Tualatin, OR 97062

Phone: (844) 434-7376
Fax: (971) 224-2199
Firescreensales@cascadecoil.com
cascadefirescreens.com

812-713 REV 2/15/2018

CUSTOM RECESSED SCREEN INSTALLATION INSTRUCTIONS FOR PULL CHAIN OPTION

(SIDE 2)

MESH EDGE ROD INSTALLATION

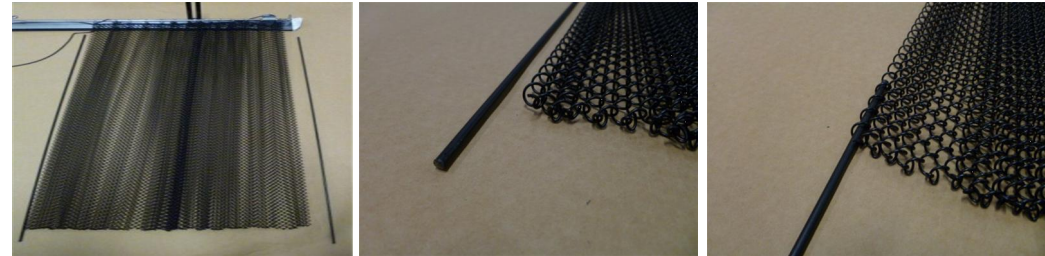


Figure 1

Figure 2

Figure 3

1. Carefully unpack the Fireplace Screen Assembly and lay it face down on a soft protective surface. **(Figure 1)**
2. On the bottom of each Mesh Panel the last Coil on each edge is open (unknuckled), to allow insertion of the rod. **(Figure 2)**
3. Slide the pre-cut Rod into the edge Coil of each Mesh Panel. **(Figure 3)**



Figure 4



Figure 5

4. Feed the Rod into the Coil until the end of the Rod is just inside the 'cut' end of the Coil. *Note: If the Rod stops before it is fully inside the Coil, then the lead end is catching on a Coil and must be guided by hand around the stoppage.* **(Figure 4)**
5. Using pliers to bend the end of the Coil over to retain the Rod. **(Figure 5)**
6. Repeat Steps 3 thru 5 for all the Rods.



P.O. Box 3707
19505 S.W. 90th Ct.
Tualatin, OR 97062

Phone: (844) 434-7376
Fax: (971) 224-2199
Firescreensales@cascadecoil.com
cascadefirescreens.com

812-713 REV 2/15/2018